

## INSTALLATION INSTRUCTION REMOTE CONTROLLER

### TECHNICAL DATA:

MODEL	VT-2442
INPUT VOLTAGE	3V (AAAx 2PCS) (BATTERY NOT INCLUDED)
TRANSMISSION POWER	6dBm
STANDBY POWER CONSUMPTION	20µA
TRANSMISSION FREQUENCY	2.4GHz
DIMENSION	52.5x21x120mm



### INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

### WARNING!

- For Indoor use only
- In the using of the remote, if the indicated lamp blinking quickly, pls change the battery in time. Pls don't use poor quality battery to avoid the leaking of battery liquid to damage the remote.
- Pls don't use the remote on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.

**IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT: SUPPORT@V-TAC.EU  
FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS. V-TAC EUROPE LTD. BULGARIA, PLOVDIV 4000, BUL.L.KARAVELOW 9B**




This marking indicates that this product should not be disposed of with other household wastes.



Caution, risk of electric shock.

### PRODUCT KEY DIAGRAM

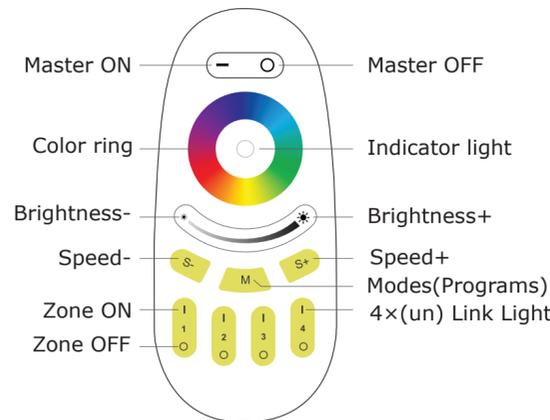

### MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.

### LINKING & UNLINKING

Remark: The light can be working after linking with the remote.

### LINKING INSTRUCTIONS



- Switch off the light, after 10 seconds switch on again
- When the light on, short press any zone of "1" 3 times within 3 seconds
- The light blink 3 times slowly means the linking is done successfully.



If the light not blink slowly, the linking failed, Pls switch off the light again, and follow the above steps again.

### UNLINKING INSTRUCTIONS




- Switch off the light, after 10 seconds switch on again
- When the light on, short press "1" 5 times within 3 seconds  
Unlinking must be the same zone with the Linking
- The light blinking 10 times quickly, means the unlinking successfully.



If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

### Grouping of several lights

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

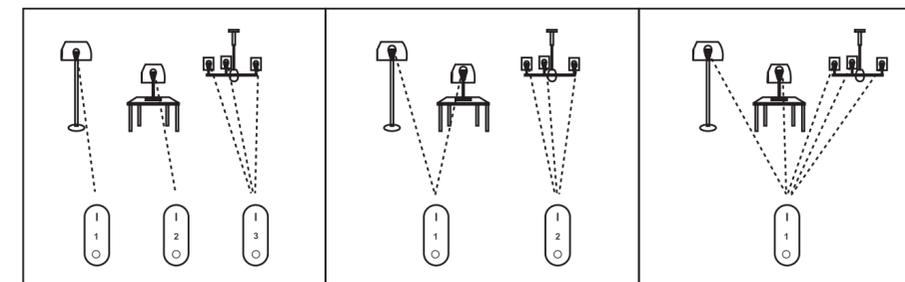

Remark:

- The user can re-programme freely as needed. One remote can control countless lamps or controllers, but one lamp or controller can only be controlled by four remotes ( Max ).
- Please check the battery installation and controller ( totally discharge the power ), when you programme after switching off and switching on.

### COMPATIBLE DEVICES

Compatible with the below devices (Not included; available to buy separately)



(SKU: 2912  
VT-2432)  
(NOT INCLUDED)



(SKU: 2913  
VT-2434)  
(NOT INCLUDED)