



Meaningful Innovation.

INSTRUCTION MANUAL

EMERGENCY KIT

COMPATIBLE WITH V-TAC LED PANEL LIGHTING



02 YEAR
WARRANTY*

TECHNICAL DATA


Model	VT-518
SKU	60303-3
Watts	45W
Voltage	DC 30-42V
Led Output Power	AC 220-240V, 50/60Hz
Charging Time	24 Hours
Working Time	3 Hours
Battery	LiFePO4 6.4V 6000mAh
Output Power	10W Max
IP Rating	IP20
LED Indicator	Green Light Color
Function	Manul Test and Self Test optionl
Dimension	216x76x38mm

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. This product is warranted for manufacturing defects only.



This marking indicates that this product should not be disposed of with other household wastes.

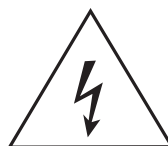

Caution, risk of electric shock.

WARNING!

1. Please make sure to turn off the power before starting the installation.
2. Installation must be performed by a qualified electrician.

Status LED Indicator					
Permanent Green	Flashing Green	Permanent Red	Flashing Red	Flashing Green and Red every other	OFF
Mains power, Battery full	Battery in Charging: Flashing every 0.5 second	Battery unconnected or Battery fault	Battery capacity too low or defective LED luminaire	Every 30days an automatic self - test will be carried out, flashing every 1 second for 2mins. Every 365days an automatic self-test will be carried out, flashing every 0.3 second for 60mins.	Defective Emergency lighting unit or In Emergency Operation,

Self Test Switch		
Test Switch	LED	Status
Press test switch < 3s	OFF	In Emergency Operation
3s < Press test switch < 5s	Green and Red light flashes slowly	An automatic self-test is carried out for one month, flashing every 1 second for 2mins
3s < Press test switch < 5s	Red light flashes slowly (once every 1 second)	Battery capacity too low or defective LED luminaire, Press test switch 1s to return to main power after repair.
5s < Press test switch < 7s	Green and Red light flashes quickly	An automatic self-test is carried out for one year, flashing every 0.3 second for 60mins
5s < Press test switch < 7s	Red light flashes quickly (once every 0.3 second)	Battery fault or lamp fault. Press test switch every 1 second to return to main power after repair

Functional Test

30days test:

Timer starts when battery is fully charged and the LED indicator turns into green, the device will automatically self-test 2mins every 30days. During this time, the LED unit will be supplied by the battery, the LED indicator will flashing green and red alternately for 2mins, flashes once every 1second.

Duration Test


The device will automatically self-test for 60mins every 365days, During this time, the LED unit will be supplied by the battery, the LED indicator will flashing green and red alternately for 60mins, flashes once every 0.3second. This is to test discharging time and battery voltage, If the battery capacity is enough working, the device will automatically to next working cycle. Otherwise, the LED indicator will flash red color.

CAUTION

1. Please strictly follow the instructions for use;
2. Do not replace the parts and do the transformation of product;
3. Battery is empty state, please charge more than 24hours before using;
4. Connect power but light does not work, please check whether lamps are properly connected to the mains;
5. Please strictly use the Emergency kit according to the wiring diagram before connection and pay attention to reverse connection;
6. Please pay attention to the battery electrodes should be connected in right way, which is used to measure electricity;
7. This Emergency kit is only suitable for use in indoor;

WIRE DIAGRAM

Caution: Please cut off the power when installation!

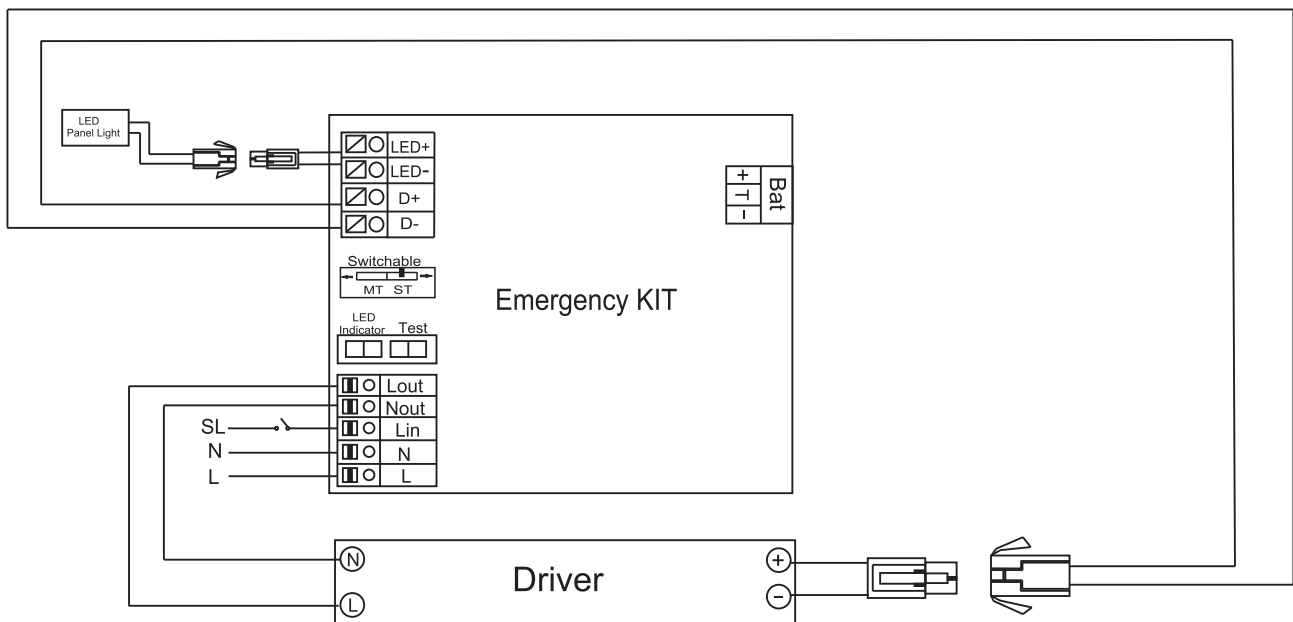

V-TAC EUROPE LTD. IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT:
SUPPORT@V-TAC.EU FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS.
V-TAC EUROPE LTD. BULGARIA, PLOVDIV 4000, BUL.L.KARAVELOW 9B

V-TAC WEST EUROPE LTD. IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT:
SUPPORT@V-TAC.EU FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS.
V-TAC WEST EUROPE LTD. GROUND FLOOR, 71 LOWER BAGGOT STREET, DUBLIN 02, IRELAND D02 P593