

INSTALLATION INSTRUCTION

WIFI DOORBELL (CHIME)



TECHNICAL DATA

INPUT POWER	BATTERY	OPERATION TEMPERATURE	IP RATING	NO OF RINGTONES	OBJECT DISTANCE	DECIBEL LEVELS
AC:110-260V	3.7V, 3400 mAh	-30°C to 70°C / -22°F to 158°F	IP55	55	1000 FT. / 300M	0-110 DB, 5 LEVELS

INTRODUCTION

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.

WARNING!

1. Please make sure to turn off the power before starting the installation.
1. Check that your mains supply is correct for the doorbell receiver.
2. The receiver is for indoor use only. Do not use outside or allow to become wet.
3. There are no user-serviceable parts. Do not attempt to repair either the transmitter or the receiver by yourself.



This marking indicates that this product should not be disposed of with other household wastes.



THE FIRST USE GUIDE:

1. Plug the receiver into a mains socket and switch the socket on.
2. Press the transmitter push button and confirm that the transmitter indicator flashes, the doorbell receiver sounds "Ding-Ding" and the receiver indicator flashes. The doorbell is paired. The default ringtone is "Ding-Dong". Users can change the ringtone easily, just refer to the "CHANGING THE RINGTONE" steps.


CHANGING THE RINGTONE / PAIRING:

- Step 1: Press the Backward or Forward button on the receiver to choose your favorite melody.
- Step 2: Press and hold down the Volume button on the receiver for 5 seconds, until it makes a "Ding" sound and the receiver indicator flashes (that means the doorbell entered into the Pairing Mode, the pairing mode will only last 8 seconds, then it will automatically exit).
- Step 3: Press the button on the transmitter quickly, it will makes a "Ding-Ding" sound and the receiver indicator flashes.
- Step 4: Press the button on the transmitter again to confirm whether the current ringtone is the one you have set, if yes, the pairing is completed.
- Remark: This method is also suitable for adding/pairing additional transmitters.


PRODUCT DIAGRAM

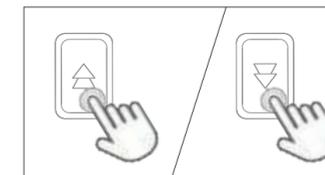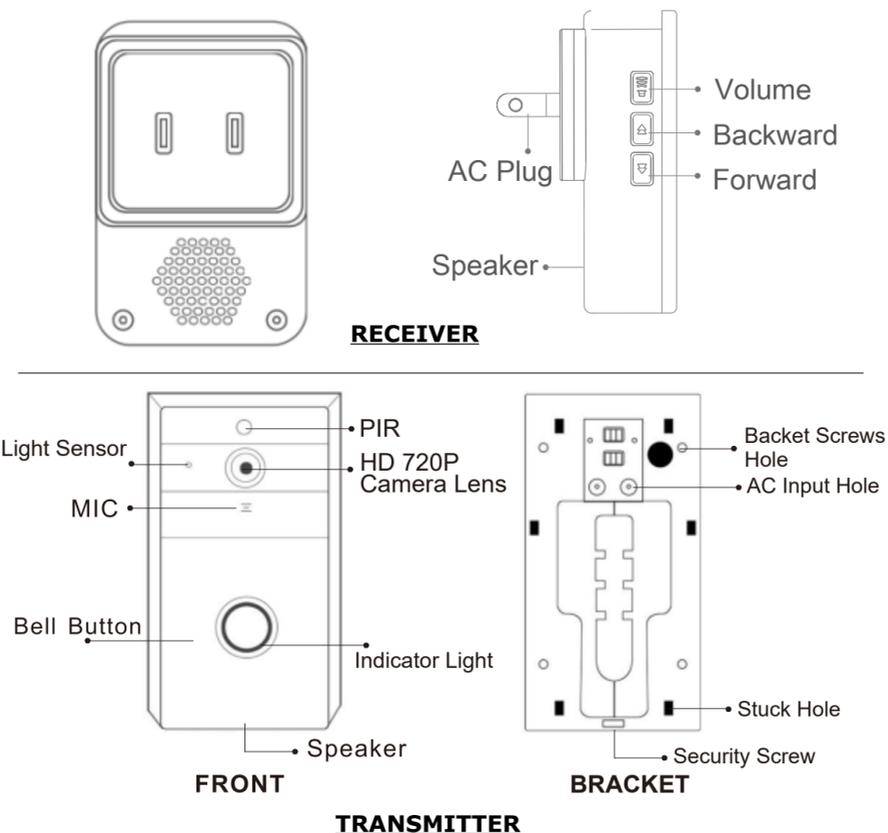


STEP 1

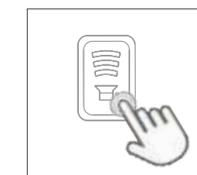

STEP 2

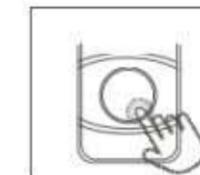

STEP 3 - 4

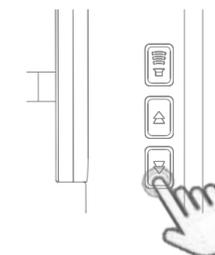

CLEARING THE SETTINGS:

Press and hold down the Forward button on the receiver for 5 seconds, until it makes a "Ding" sound and the receiver indicator flashes, all the settings will be cleared, the doorbell will back to the factory default settings (it means that the ringtone you have set and the transmitters you have added/paired will be cleared).

INSTALLATION:

1. Plug the receiver into a mains socket and switch the socket on.
2. Place the transmitter exactly where you intend to fix and, with the doors closed, confirm that the doorbell receiver still sounds when you press the transmitter push button (If the doorbell receiver does not sound, this may be due to metal within the fixing surface and you may need to reposition the transmitter).
3. Fix the transmitter in place with bracket.

ADJUSTMENTS:

1. The volume of the doorbell may be adjusted to one of five levels. Press the Volume button on the receiver to increase the volume by one level, the receiver will sound to indicate the selected level. If the maximum level is already set, the doorbell will switch to the minimum level, which is the Silent Mode.
2. The melody played by the doorbell may be set to any one of 55 different selections. Press the Backward or Forward button to select the next available melody, the receiver will sound to indicate the selected melody. To set the doorbell ringtone to the selected melody, please refer to the "CHANGING THE RINGTONE" steps.

CHANGING THE BATTERY:

1. Insert the Mini Screwdriver in the cover slot at the bottom of the transmitter and twist to release the transmitter from the cover.
2. Remove the exhausted battery and dispose of properly.
3. Insert the new battery into the battery compartment. Observe correct battery polarity (+ve and -ve), or the unit will not function and may be damaged.
4. Refit the transmitter to the cover, with the push button at the bottom.

In case of any query/issue with the product, please reach out to us at: support@v-tac.eu
 For More products range, inquiry please contact our distributor or nearest dealers.
 V-TAC EUROPE LTD. Bulgaria, Plovdiv 4000, bul.L.Karavelow 9B