



CAUTION

- The product must only be installed by an authorized electrician and in compliance with local, regional and state electricity regulations.
 - Check if the electricity specification of this device are compatible with your installation.
 - Turn off the power before installing or repairing the fan.
 - The fan must be properly grounded to avoid the risk of electric shock.
 - Use and unauthorized technical modifications could suppose a risk of injury.
 - Should be 220V as per the specifications.
 - Do not connect the fan motor to a current dimmer. It could give unsatisfactory performance (engine humming) and cause engine damage.
 - Be careful while working near the spinning blades.
 - The fan must be installed so that the blades are at least 2, 3 meters above the ground.
 - The fan must be hung from a structure capable of supporting a weight of at least 50 kg. The fixture must be able to support the weight of the fan in motion and should not wobble or loosen.
 - Make sure that the blades do not come in contact with any object at the installation site. Always leave a minimum clearance of 50cm from the tip of the blades to the wall or ceiling.
 - Keep in mind that the larger the space, the better the fan's air flow will be.
 - This device is designed for indoor use only. Do not use in an open space or where it may be exposed to water or moisture.
 - Never install the appliance in a room with a high degree of humidity.
 - The fan must not be started in a room with a gas appliance running at the same time.
-

-
- The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
 - This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - Before reversing the direction of rotation of the blades stop the fan completely.
 - Do not insert any object into the fan blades while they are rotating. This can damage them and alter the balance of the fan and the device can fall down.
 - After the fan is fully installed make sure all fasteners are securely fastened to prevent any wobbling or falling of the machine.
 - Ensure that the fan is switched off from the supply mains before removing the guard.
 - If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.
 - The replacement of parts of the safety suspension system device shall be performed by the manufacturer, its service agent or suitably qualified persons.
 - The mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified person.

The instruction and safety regulations in this manual cannot prevent all conditions and situations that may occur. For obvious reasons, this manual cannot include factors such as caution and care. These factors must be assumed by who installs, maintains, uses and enjoys the product.

INTRODUCTION & WARRANTY


Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

WARNING!

1. Please make sure to turn off the power before starting the installation.
2. Proper grounding should be ensured throughout the installation.
3. Installation should only be done by a certified electrician.



This marking indicates that this product should not be disposed of with other household wastes.

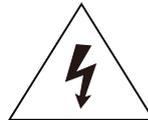

Caution, risk of electric shock.

WEEE Number: 80133970

INSTRUCTION MANUAL

DECORATIVE CEILING FANS (VT-6042-4)



TECHNICAL DATA

- 1) 42" (107CM) Decorative ceiling fan
- 2) With forward and reverse function
- 3) 4 MDF blades with cane and double color
- 4) Powerful Motor:153*10mm, 2.3kg
- 5) Revolutions per minute: 220±10 RPM
- 6) Blade angle 12°
- 7) 3 speeds and light pull chain
- 8) 1xE27 light kit (light source NOT included)
- 9) Power:220V,50HZ,50W (power of the motor)
- 10) G.W.: 4.0KG / N.W.: 3.28KG

MULTI-LANGUAGE MANUAL QR CODE



Please scan the QR code to access the manual in multiple languages.

BEFORE INSTALLATION

- Open the box avoiding the use of blades or “cutters” to avoid scratching the fan components.
- Unpack the parts and handle them carefully so that they do not bend or scratch, and place the motor on a cloth or a soft surface to prevent damage (You can also use the anti-shock foam on the box for this purpose). Never support the motor sideways.
- It is advisable to mount the fan on the floor or a surface large enough so that no components falls.
- Identify all parts before beginning assembly.

TOOLS NEEDED

- Not included. It is recommended that the screw driver be magnetized.



PROBLEM SOLVING

Before carrying out the checks detailed below, the fan must be without power supply.

1. THE FAN MAKES EXCESSIVE NOISE WHILE ROTATING

- Allow a slight separation between the canopy and the ceiling, preventing them from touching directly.
- Check that the fixing screws of the blades, the fixing screw to the roof, the stem and fastening elements are correctly tightened.

2. THE FAN WOBBLER

- Check that the fixing screws of the blades and the fixing screws to the roof, the stem and the fastening elements are correctly tightened.
- Check that the blades are not deformed and follow the blade balancing instructions detailed in this manual.

3. THE AIR FLOW IS INSUFFICIENT

- Check that the blades rotate in the correct direction (Summer/Winter)
- Avoid nearby objects that may impede air circulation.
- Verify that the diameter of the blades of your fan is sufficient for the area of the room in which it is installed.

4. THE LIGHT DOES NOT TURN ON

- Check the bulb is not blown, otherwise replace it with a new one.
- Check the connections are properly fixed according to the instruction manual.

MAINTENANCE


- Over time and due to the natural movement of the fan, some connections may come loose. Check the support connections, brackets and attach the blades twice a year, and make sure they are firm.
-

- Clean the appliance regularly to maintain its appearance as new. To do this, use a soft lint free cloth to avoid scratching the finish. Never use water because it could damage the motor or the wood of the blades.

- It is not necessary to grease the fan, since the motor bearings permanently contain lubricant.

WINTER/SUMMER MODE

Reverse the direction of blades rotation to change to summer/winter mode.

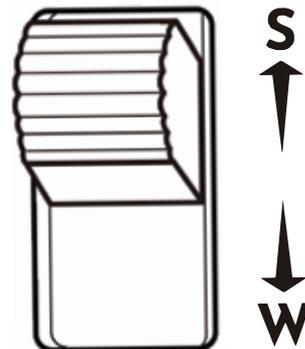


BALANCING OF BLADES

The balancing of the fan is not a sign of malfunction. Before balancing, and always with the fan off, check the fastening of the blades and that they do not show deformations. Once checked, if everything is correct, proceed to the balancing of the blades.


1. Select the blade to balance

- Put the clip included in the center of a blade. Next, turn on the fan and, if the balancing persists, put the clip on another blade until the swing decreases. In this way, the selected blade will be the one that needs the counterweight

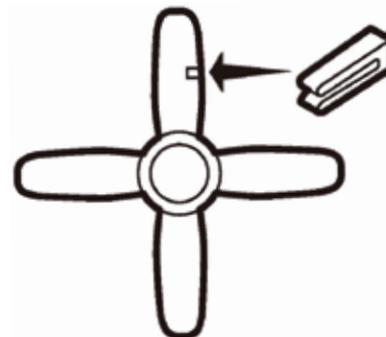




2. Find the equilibrium point


Place the clip on the blade you have previously selected and try the best place to place it (from the center to the tip of the blade) until the wobble disappears.

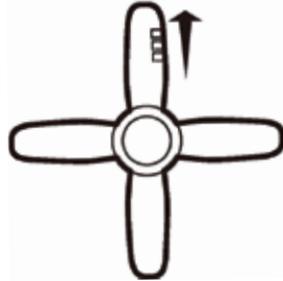


3. Check the correct balance

Glue the counterweight to the height of the clip on the surface of the blade. Remove the clip, and turn on the fan. Check if it continues to wobble, if so, place another counterweight. If it gets worse, you should try another better area to place it.

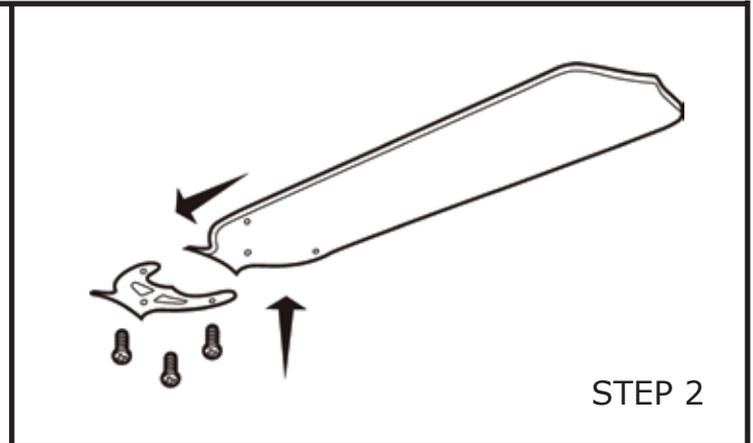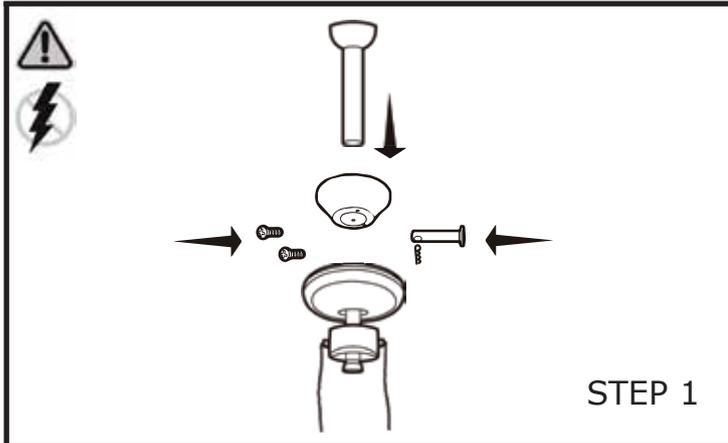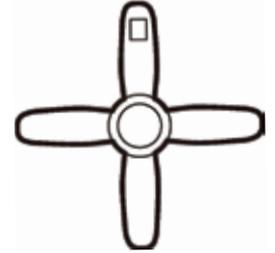


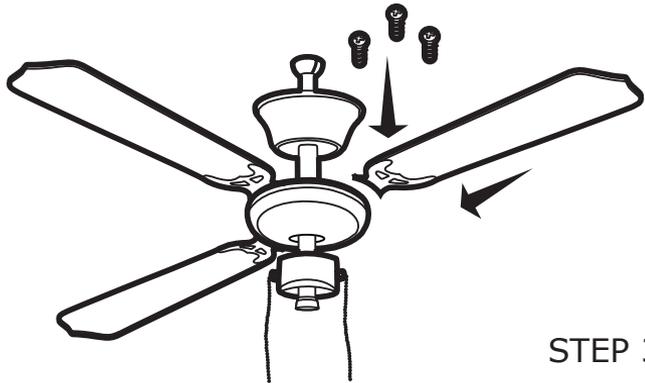


STEP 3

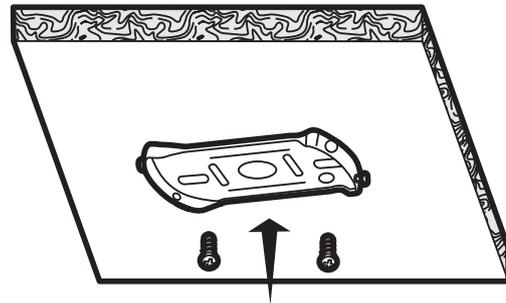


STEP 4

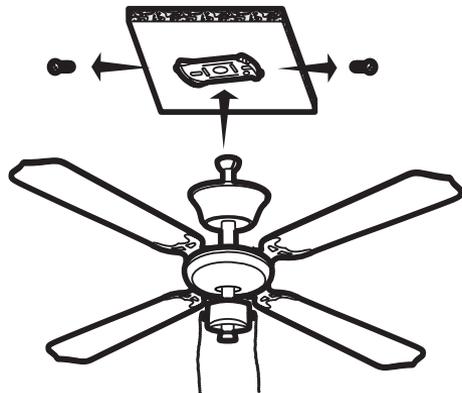


STEP 5

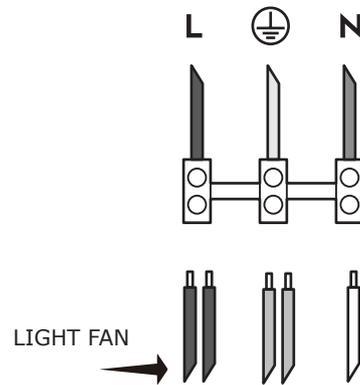


STEP 6

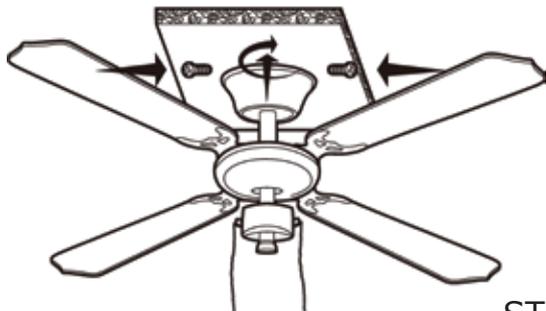

STEP 7

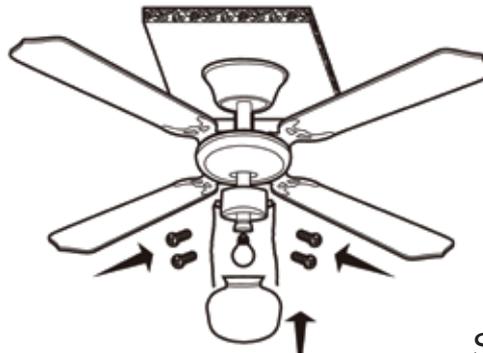


STEP 8

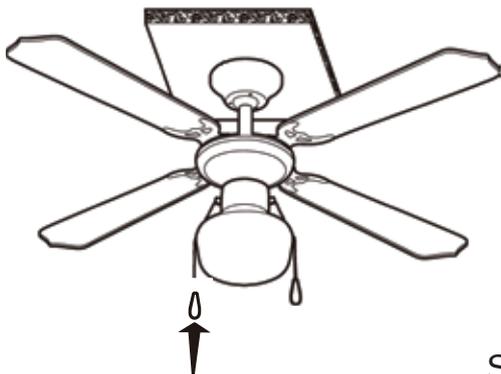

STEP 9



**NOTE: PROCEED TO BALANCE THE
BLADES IF THEY ARE BALANCED**

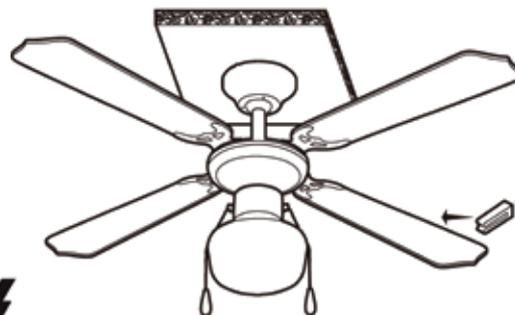

STEP 10