

## INSTRUCTION MANUAL MINI PORTABLE SPEAKER



VT-6133 SKU: 7712



### INTRODUCTION

Thank you for selecting and buying V-TAC Product. V-TAC will serve you the best. Please read these instructions carefully & keep this user manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.T



**MULTI-LANGUAGE  
MANUAL QR CODE**  
Please scan the QR code  
to access the manual in  
multiple languages.

### GETTING STARTED

- Remove the speaker from the box.
- Please retain all packaging until after you have checked and counted all the parts and the contents against the Package Contents list.

### PACKAGE CONTENTS

- Bluetooth Speaker (1pc)
- 2 in 1 USB Cable (1pc)
- Auxiliary cable (1pc)
- Instruction Manual (1pc)

### FEATURES

- Enjoy music wirelessly.
- Bluetooth wireless streaming
- Built-in rechargeable battery.
- Support TF card play music



This marking indicates that this product should not be disposed of with other household wastes.

### NOTE


- \*Radio frequency band: 2.048G-2.480G
- \*Radio-frequency power transmitted: 6dB

### SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.



### DESCRIPTION OF PARTS

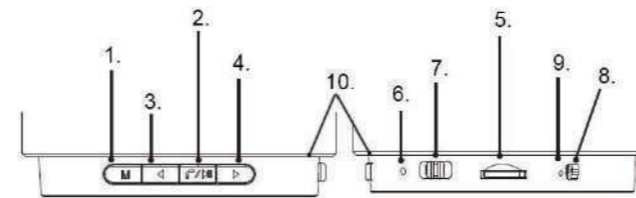

1	Mode Switch button	To switch Bluetooth / Radio / TF card / LINE IN mode
2	Answer / end a call / Play / Pause / FM stations	Once call coming, long press the button to refused the call. A short press the button to play / pause / answer / end calls. Press the button twice to redial the last call. Long press the button, it can scan all FM stations.
3	Previous track / Volume down	Short press this button to switch to the previous song Long press this button to decrease the volume
4	Next track / Volume Up	Short press this button to switch to the next track Long press this button to increase the volume
5	TF card slot	TF card play music (MAX.16G)
6	MIC	Microphone
7	Power switch ON/ OFF	Push the button to turn ON / OFF
8	Charging port /LINE IN	USB charging port /LINE IN play music
9	Charging LED indicator	Charging LED indicator
10	LED light	Blue LED light

### INSTRUCTION FOR USE CHARGING INSTRUCTIONS

The speaker comes with a built in rechargeable battery. Before using it for the first time it is recommended you charge the battery fully. The device can also be used whilst powered and is charging.

Connect the USB charger cable to computer USB port or a USB wall charger (not included).  
Connect the other side to the USB charging slot of the Speaker, the battery charging LED indicator will be light red.  
When the battery is fully charged, the LED indicator will switch off.  
When the battery is running low, a tone will be emitted to indicate the battery needs charging.

### PAIRING THE SPEAKER WITH BLUETOOTH DEVICES (PHONE OR MUSIC DEVICE)

Push the Power switch button to "ON".  
The Bluetooth mode will open automatically.  
The LED indicator light will flash Blue.

Place the speaker and Bluetooth device (phone or music device) no further than 20 feet apart; Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device. Once you have activated Bluetooth on your device, select the pairing name "SKU-7712" or "SKU-7713" or "SKU-7714" or "SKU-7715" from the list of available Bluetooth devices. If required, enter the password "0000" to confirm to pairing. Once paired successfully, you will hear a tone indicating pairing successful. You can now start to use the speaker.

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices

The speaker will attempt to automatically connect to the last device it was paired with when Bluetooth mode turn on. If you want to pair it with a new device, please turn OFF your last Bluetooth device (phone or music device) then use your new device to search and select the pairing name.

Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your device's user manual for further information.

### FUNCTION SUMMARY LISTENING TO MUSIC

Once the speakers are paired with your device you can stream music wirelessly through the speaker. Select the track music what you wish to listen on your phone and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information. Control the volume of your speaker using the control on your phone or device.

### USING THE FM RADIO

Turn on the unit, and press the Mode button to select the FM radio mode. Must be inserted the charging cable as an antenna.

- 1) A long press on the Play/Pause button, FM radio will automatic searching and can automatically save;
- 2) A short press on the Volume up & Volume down button to select the desired radio station.

### TF CARD PLAYBACK

After the metal speaker is turned on, insert the TF card to the card slot, it will switch to micro SD card mode and start playing the music, the Bluetooth mode will be disconnected. Long press the volume to adjust the volume level, short press the volume to adjust the previous track and next track.

### USING LINE IN

After the metal speaker is turned on, connect one end of the micro usb cable (included) into charging port /LINE IN jack, the other end of the 3.5mm LINE IN Cable to connect MP3 / Smartphone, press the Mode button to select the LINE IN mode to play music.

### CLEANING & MAINTENANCE

Turn OFF the speaker if it is left unattended and before cleaning. NEVER immerse the speaker into water and please use a dry cloth for cleaning.

### STORAGE

Turn off the power when you not in use, clean and store safety.

### DO'S AND DON'TS

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Avoid direct spray of liquids. Do not immerse in any liquids.
- Don't use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, distort certain plastic parts.
- Don't dispose of the speaker in a fire as it will result in an explosion.
- Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.
- Don't let the speaker drop on to the floor. The internal circuitry might get damaged.
- Don't attempt to disassemble the speaker as it may get damaged if you are not professional.
- Do not expose the speakers to heat or fire. Avoid storage in direct sunlight.
- Do not subject the speakers to mechanical shock.
- Do not add any fluids or solids to your speaker.
- Do not use the product if it has been damaged in any way.

### SPECIFICATIONS

Bluetooth specification	Bluetooth 4.1
Operating distance	10 meters (max.)
Frequency response	100Hz-15KHz
Speaker power	1 x 3W
Built-in battery	3.7V / 400mAh
Charging input voltage	DC 5V~ 500mA
Charging time	About 2.5 hours
Working time	About 1.5 hours
Product size	7x7x4.2CM

Note: Battery life & charging time may vary based on usage & types of devices used.

IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT: SUPPORT@V-TAC.EU FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS. V-TAC EUROPE LTD, BULGARIA, PLOVDIV 4000, BUL.L.KARAVELOW 9B

### IMPORTANT NOTES

- This product contains battery type "Secondary" (rechargeable).
- Electrical and electronic equipment that has become waste is known as old equipment/device. Old devices must not be disposed of with other household waste.
- Owners of old devices at the end of its service life must return the device by taking them to the collection points set up by public waste disposal authorities or distributors. This return does not entail any costs for you.
- Owners of old devices have an obligation to remove accessible batteries / rechargeable batteries as well as non-destructively removable lamps from the old device prior to return. This does not apply if old devices are being prepared for reuse with the participation of a public law firm.
- Battery removal warning: The battery contained in this product must be removed only by professional personnel only. The battery must never be removed by the end user, if not removed correctly it could damage the battery which could cause fire.
- Batteries removed from an old electronic device should be disposed of separately. This return of battery does not entail any costs for you and the user is obliged to return the battery.
- Please make sure that this product is not powered on when removing the battery. Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery. Please handle the battery with Caution!
- If electrical appliances or batteries are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



- The symbol of "Crossed rubbish bins" indicates that this product should not be disposed of with other household wastes and must be collected separately from unsorted municipal waste at the end of its service life.
- Please use the link below to view the online directory of the collection and return points: <https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen>

We V-TAC Europa Ltd declare that this equipment is in compliance with the essential requirement and other relevant provisions of Directive 2014/53/EU and Directive 2011/65/EU Declaration of conformity can be obtained from the below  
<https://www.vtacports.com/media/ftp-upload/certificates/DOC/EU/VT-6133-DOC-BLUETOOTH%20SPEAKER-EU.pdf>

Bulgaria, Plovdiv 4000, 9B, Lyuben Karavelov blvd. VAT Number: BG201233995 manager@v-tac.eu. TEL: +35988712879.

