

INSTRUCTION MANUAL SPEAKER (VT-6203-2)



INTRODUCTION

Thank you for selecting and buying V-TAC Product. V-TAC will serve you the best. Please read these instructions carefully & keep this user manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.



Multi-Language Manual QR CODE

Please scan the QR code to access the manual in multiple languages.

TECHNICAL SPECIFICATIONS

- Input Power: 5V---1A
- Output Power: 20W
- Woofer: 2x3 inches
- Speaker: 3Ω 10W
- Frequent Effect: 100Hz - 18KHz
- BT version: 5.0
- S/N: ≥80dB
- FM Radio Frequency: 87.5-108MHz
- P.M.P.O: 150
- Rechargeable Battery: 3.7V 3000mAh
- Working time: Playtime 3-6 hours
- Charging Time: 5-6 hours
- Dimensions: 153.7x143.73x341.5mm
- Supporting: USB/TF card play
- Speaker weight: 1480g

ATTENTION

1. To maintain battery life, please charge the battery every time the power is completely depleted. Damage may occur if the battery is not charged for longer periods, so please use and charge the battery at regular intervals.
2. Our company reserves the right to update the product without any notice.
3. If you have any issue with the product, kindly contact a professional technician. Do not open the unit yourself.
4. For safety reasons, keep the device away from children.

INSTRUCTIONS

1. This unit uses a rechargeable battery. When the battery power is depleted, please plug the device to an electric socket with the correct input voltage.
2. When the unit is charging, please make sure to switch on the AC/DC option, then safely unplug when finished.
3. On first use, the battery must be charged for 10 to 12 hours.
4. The unit's battery working time lasts up to 3 to 6 hours, depending on the usage.

BLUETOOTH FUNCTION

When you turn on the speaker, Bluetooth function will be activated. Search for the Bluetooth "V-TAC VT-6203-2" on your device and connect


PACKAGE INCLUDED

- Speaker (1Pc)
- User Manual (1Pc)
- USB Cable (1Pc)

CHARGING INDICATOR

Connect the charging cable to the DC: 5V---1A adapter, plug it into the charging port after the machine is turned off; red light will be on when charging, red light will be off when it is fully charged. The time of full charge is about 6 hours.

PANEL FUNCTION

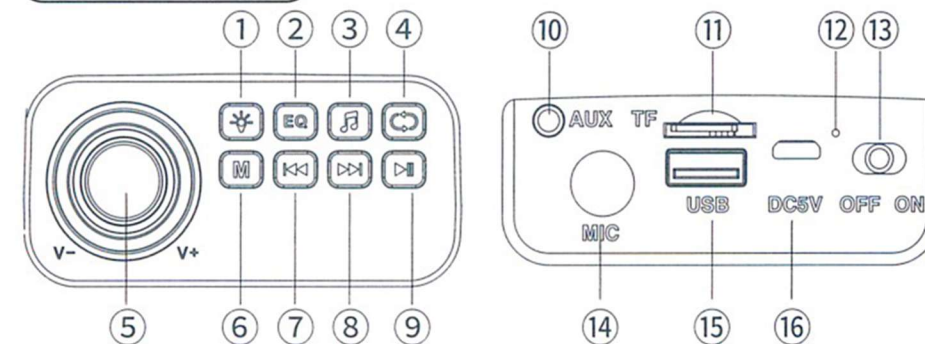

1. (*) : Short press, light effect 1/ 2/ 3/ 4/ 5/ turn off horn light / turn off knob light; each short press changes one kind of light effect. Among them, lamp effect 3 is the changing lamp according to the rhythm of playing music, Aux mode plays music in light effect 3, the light does not change with the music.
2. (EQ) : Short press two kinds of sound effects, EQ0 (default indoor sound effect at power-on); EQ1 (outdoor sound effect).
3. (♪) : Short press to switch the accompaniment/origin vocals.
4. (⏮) : In music mode, Short press is a single loop (ONE) All loops (ALL)
5. (V-/V+Volume Knob) : Rotate to the left to decrease volume, and to the right to increase volume.
6. (M) : Short press mode conversion: BT mode, TF card, U disk mode, FM mode conversion, long press in FM mode to automatically search for channels.
7. (⏪) : Short press previous song/select previous radio station, long press to rewind.
8. (⏩) : Short press next song/select next radio station, long press to fast forward.
9. (⏸) : Short press play/pause, long press in FM mode to automatically search for channels.
10. (AUX) : Insert AUX line for external power supply.
11. (TF) : Insert TF card to play MP3 music.
12. (Charging Indicator) : Red light will be on when charging, red light will be off when it is fully charged.
13. (ON/OFF) : Power on/off.
14. (MIC) : Insert microphone.
15. (USB) : Insert USB Flash Disk to play MP3 music.
16. (DC 5V) The charging jack can use the dedicated USB Charging cable delivered by this machine to connect to the charger for charging.